FMC-B12 COLUMN FOR LIGHT CURTAINS

GENERAL

These mounting instructions contain information about the correct mounting of the column.

- The assembly of the FMC-B12 with the column rotation flange;
- The assembly of the FMC-B12 stand for mounting on the FMC-CB/FMC-CBL stand bottom;
- The correct mounting of the barrier on the column (rif. Normative ISO 13855 / EN999-2008);
- Alignment Emitter Receiver;
- Dimensions;

Please find detailed information about the function of the light curtains / light grids in the relevant mounting and wiring instructions.

ASSEMBLY OF THE FMC-B12 WITH THE ROTATION FLANGE (Fig. 1)

• Assembly the rotation flange with the profile using the correct provided screws (as shown in figure 1).





Figure 1

ASSEMBLY OF THE FMC-B12 STAND WITH THE STAND BOTTOM; (Fig. 2)

- Mount the FMC-CB/FMC-CBL stand bottom on the floor (see mounting instruction for stand bottom).
- Loosen the three allen screws and remove the washers.
- Assembly the column to the stand bottom, centering the FMC-B column rotation flange with the guides of the FMC-CB/FMC-CBL stand bottom upper plate.
- Fix the column tightening the three allen screws and the washers.



EXACT POSITION OF THE BARRIER ON THE COLUMN



•	You will find the exact position of the barrier in the table below (distance
	between the first light beam and the ground) (rif. Normative ISO 13855 /
	EN999-2008).

MODEL	2B	3B
WODEL	2 BEAMS	3 BEAMS
Н	400	300

BARRIER ASSEMBLY AND ALIGNMENT (figura 3)

- Put in the choosen slot the provided inserts (push to insert);
- Assembly the barrier to the column with the provides brackets;
- Perform leveling fine adjustments by means of the hexagonal nuts of the stand bottom (B).
- For an exact alignment of emitter and receiver, loosen the three allen screws (C) that fix the rotation flange and rotate the two columns until the barrier signal LEDS light on (ref. Technical manual).





DIMENSIONS

