


Bank switching by Bar code reader

MVS controller switches the Bank with the bar code

MVS-OCR has 32 Banks for 32 parameter setups that can be switched automatically by code input from bar code reader through RS232 I/F. This function prevents errors caused by human careless miss. What you have to do is just let bar code reader read the code to change the Bank.

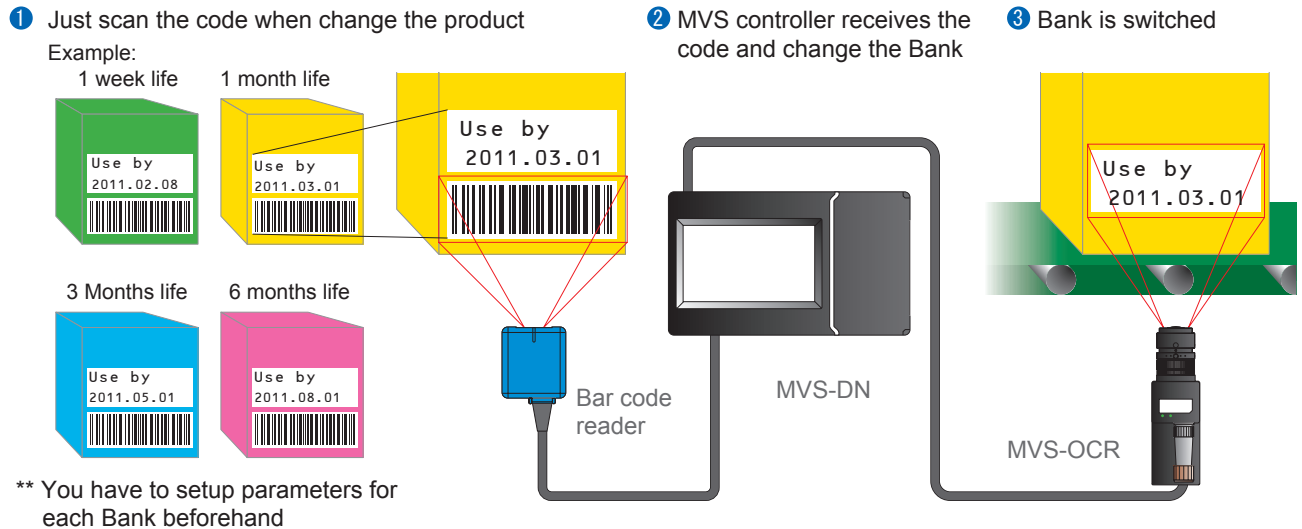

Verification between printing and bar code or 2D bar code

Normally, you had to have PLC not only OCR camera and code reader to verify printing with the code. Now, you can verify printing with the code utilizing MVS-DN controller without any PLC that means you can reduce cost and time for building up the verification system.

